


## INSTRUCTION SHEET


## 30 SECOND STRAINED WIRE

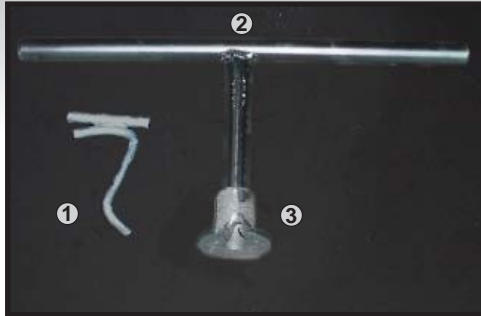


- ① The Klaw Klip Unit
- ② Application Tool Handle
- ③ Application Tool Socket



Place one Klaw Klip into the socket of the Application Tool and place wire between Klaw Klips.

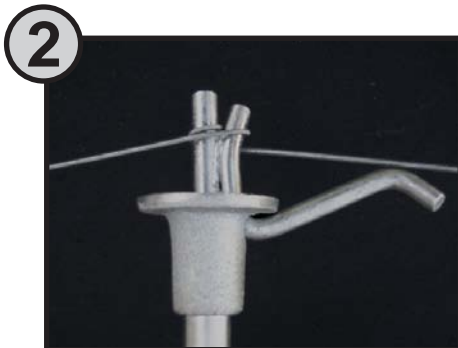

Twist handles clockwise while pushing towards wire.

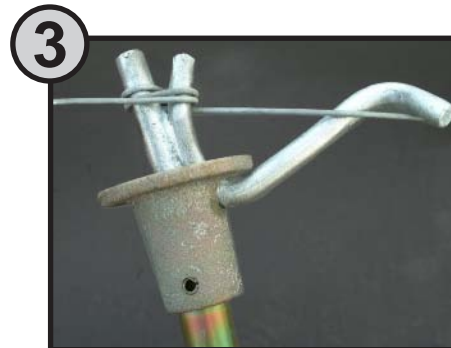

Lock Klaw Klip over wire to prevent unwinding.

Reposition your hands on the Application Tool and twist clockwise half a turn.

### REMEMBER

- Check that both sides of the wire are winding towards the Klaw Klip.
- After each half turn, lock Klaw Klip over wire and reposition your hands on the Application Tool.
- Take care to layer wire neatly underneath itself towards the Socket.



When you reach your desired wire tension, remove tool.